


Inexpensive Chattering Tool

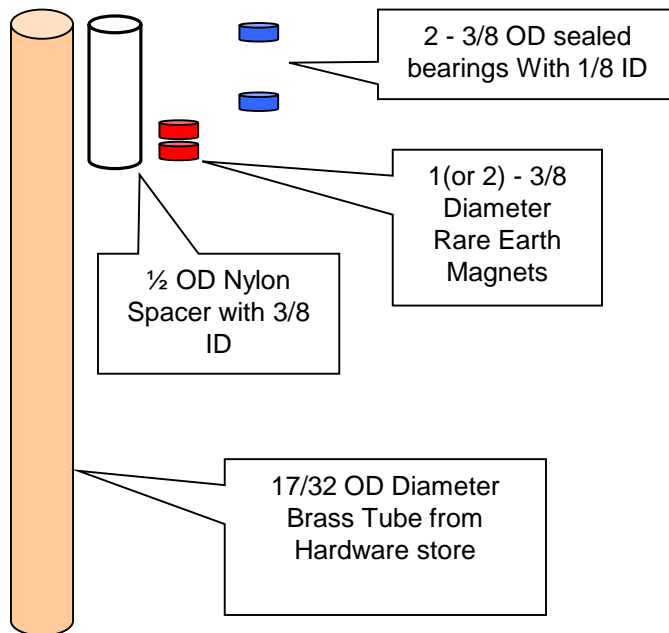

- Glue the magnet(s) in one end of the nylon tube spacer.
- Let one bearing set on the magnet(s).
- Glue 2nd bearing flush to top of nylon spacer (May need to have vertical slits in nylon spacer to keep the magnet flush with the top of nylon spacer).
- Glue spacer assembly in top end of the brass tube.
- Turn handle to fit part way inside the brass tube and extend out for comfortable grip.
- Glue brass tube to handle.
- Experiment with different 1/8" Dremel bits.